# FFW 930.1

FLAME RELAY

# HANDBOOK



### INTRODUCTION

The flame relay FFW 930.1 controls and monitors semi automatic burners. It is also used together with an oil- or gas burner control box for special, fully automatic control- and monitor functions.

The FFW 930.1 is fully compatible with the FFW 930

## **CONSTRUCTIONAL FEATURES**

The flame amplifier circuit and a relay with 2 change-over contacts are housed and protected in a non-inflammable, non-transparent, plug-in type plastic case. A flame indicator bulb and the central locking screw are placed on top of the housing.

The wiring base is equipped with additional loop terminals and together with the various possibilities for cable entry enables an universal wiring.

# FUNCTION

Depending on the wiring, a semi or fully (only together with a burner control box) automatic control of a burner is possible. As soon as a flame signal is detected, the built-in relay switches on, the relay contacts change over and activate the various burner components. Simultaneously, the flame indicator bulb on the top of the unit switches on.

## **TECHNICAL DATA**

Supply voltage

Fuse rating Power consumption 220 / 240 V (-15... +10%) 50 Hz (40 - 60 Hz) max. 10 A rapid, 6 A slow 5 VA

Max. current per output	4 A
Total	6 A
Amplifier sensitivity	1 μΑ
Min. current from UV tube	
or ionisation probe	5 μΑ
Flame detector cable	
<ul> <li>ionisation probe</li> </ul>	max. 20 m cable length
– UV tube	max. 2 m cable length
Flame detector	
<ul> <li>Ionisation probe</li> </ul>	
– UV tube type	UVZ 780 red
Weight incl. base	200 g
Mounting attitude	any
Permissible ambient temp.	-0 °C +60 °C

# APPLICATION TECHNOLOGY FEATURES

#### 1. Flame detection

The following types of flame detector can be employed:

- Ionisation probe, where the mains supply provides a neutral earth connection. Suitable for gas burners (signal current from flame cannot be influenced by interference from ignition spark).
- UV sensor type UVZ 780 red, suitable for gas and combi burners

#### 2. Safety

The design/construction of the flame relay FFW 930.1 conforms to the present applicable European standards and regulations.

By use of a UV-cell, the flame sensor needs to be checked prior opening of the valves for their correct function (visually/ manually or with a suitable wiring) of the burner components.

#### 3. Mounting and Electrical Installation

At the base:

- 3 earth terminals, with an additional tag for the burner earth.
- 3 neutral terminals, with a fixed internal through connection to the neutral input, terminal 8.
- 2 separate slide-in plates and 2 fixed threaded knockouts as well as 2 knockouts underneath, facilitate wiring of the base.

General:

- Can be mounted in any position, insulated as per IP 40 standard. The control box and detector probes should however not be subjected to excessive vibration.
- The applicable installation regulations must be observed during installation.



## **Combustion Controls EMEA - Local Honeywell Sales Offices**

#### France

Honeywell SA Parc Technologique de St. Aubin Bâtiment Mercury – BP87 91193 Gif-Sur-Yvette Cedex FRANCE

Phone: (33) 1 60 19 80 00 Fax: (33) 1 60 19 81 81

internet: www.honeywell.fr

#### **Eastern Europe**

Honeywell s.r.o. Mlynske Nivy 73 PO Box 75 82007 Bratislava 27 SLOVAKIA

Phone: (421) 2 58247 400 Fax: (421) 2 58247 415

e-mail: info.slovakia@honeywell.com

#### Germany, Austria, Switzerland

Honeywell GmbH Kaiserleistrasse 39 63067 Offenbach DEUTSCHLAND

Phone: (49) 6 980640 Fax: (49) 69 81 86 20

internet: www.honeywell.de

#### Italy

Honeywell S.r.I. Via P. Gobetti, 2/B 20063 Cernusco sul Naviglio (MI) ITALY

Phone: 39 02 92146 1 Fax: 39 02 92146 888

internet: http://www.honeywell.com/sites/it/

#### Spain

Honeywell S.A. Josefa Valcárcel, 24 28027 Madrid SPAIN

Phone: (34) 9 13136100 Fax: (34) 9 13 13 61 27

internet: www.honeywell.es

#### **United Kingdom**

Honeywell Control Systems Ltd Honeywell House, Arlington Business Park Bracknell Berkshire, RG12 1EB UNITED KINGDOM

Switchboard +44 (0)1344 656000 Information Centre Tel +44 (0)1344 656235 Information Centre Fax +44 (0)1344 656240

Email: Uk.infocentre@honeywell.com internet: www.honeywelluk.com

#### Benelux

Honeywell B.V. Laarderhoogtweg 18 1101 EA Amsterdam Z.O. THE NETHERLANDS

Phone: (31) 2 05656911 Fax: (31) 2 05 65 66 00

internet: www.honeywell.nl